 

AUTOMATICALL PRINT REPORTS FROM THE SYS20 TIMER

- 1 Push the **ENTER** key on the keypad. If you have a lockout code setup in the programming, enter the lockout code first. The next display on the LCD display that appears as shown:



04/26/05 06:30:54
> Enter command or ESC <

- 2 Now push the **SETUP** key and the number 7. You will see the display shown:



04/26/05 06:30:54
Auto Every Car Report
> Enter 1=Yes, 0=No <

- 3 The report options to print automatically are for: *Every Car*, *Hourly*, *Daypart* and *Daily*. Enter 1 or 0 for each report that you want to print automatically.