

## CHANGING THE ALERT TONES ON THE SYS20 TIMER

The tones that are heard out of the timer generally relate directly to what is being displayed on the red number LED display.

- 1 Push the **ENTER** key on the keypad. If you have a lockout code setup in the programming, enter the lockout code first. You will get a display on the LCD display that appears as shown:



```
04/26/05 06:30:54
> Enter command or ESC <
```

- 2 Push the **SETUP** key and the number 4. The next display on the LCD display will appear as shown:



```
04/26/05 06:30:54
> Alert tones: 0=Done
> Enter Speaker (1-4) 0 <
```

- 3 For the speaker in the SYS20 timer itself, press the number 1 key.
- 4 The next screen that displays asks which Tone Event you want to sound an alert for. The options are:

**#1** for when the car arrives at the detection point that the red LED display is showing. Example; if your display is showing TOTAL time in scenario #2, this is the point when the car arrives at the menu board. If the display is showing SERVICE WINDOW time for any scenario, this is the point when the car arrives at the service window.

**#2** is for when a vehicle leaves the drive thru before the *target time* programmed under dayparts and targets.

**#3** is for when the vehicle exceeds the *target time* programmed under dayparts and targets.

**#4** is for when the vehicle exceeds the *excess time* programmed under dayparts and targets.