 

CHANGING MAIN RED TIME DISPLAY ON THE SYS20 TIMER

- 1 Push the **ENTER** key on the keypad. If you have a lockout code setup in the programming, enter the lockout code first. You will get a display on the LCD display that appears as shown:



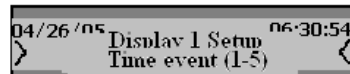
```
04/26/05 06:30:54
> Enter command or ESC <
```

- 2 Now push the **SETUP** key and the number 3. The next display on the LCD display will appear as shown:



```
04/26/05 06:30:54
> Display Config: 0=Done
  Display # (1-4) : 0 <
```

- 3 For the main red display on the SYS20 timer itself, press the number 1 key. The next display on the LCD display will appear as shown:



```
04/26/05 06:30:54
> Display 1 Setup
  Time event (1-5) <
```

- 4 Push the number key for the time event you wish to display. Typically, either the service window (#1) or Total Time (#5) events are shown.