

## ADJUSTING THE TONE VOLUME LEVEL ON SYS30 REMOTE DISPLAYS

The sound level of the remote display alert tones can be set with the screw adjustment on the bottom of the unit – next to the reset button (see figure below). Use a small screwdriver, turn the screw clockwise to decrease the volume, counterclockwise to increase it.

