

---

---

## CHANGING THE CURRENT TIME ON THE SYS20 TIMER

- 1 Push the **ENTER** key on the keypad. If you have a lockout code setup in the programming, enter the lockout code first. You will get a display on the LCD display that appears as shown:



04/26/05 06:30:54  
> Enter command or ESC <

- 2 Push the **SETUP** key and the number 2. The next display that appears is as shown:



04/26/05 06:30:54  
> System Setup  
Enter date: 04/26/04 <

- 3 If the date is correct, push enter until the next screen appears which is the time of day. Enter the correct time, then push enter. Push escape thru the next screens until you're back to the top screen.