

---

---

 
## CHANGING THE SYS20 DAYPART OR TARGET TIMES

- 1 Push the **ENTER** key on the keypad. If you have a lockout code setup in the programming, enter the lockout code first. You will get a display on the LCD display that appears as shown:



```
04/26/05 06:30:54
> Enter command or ESC <
```

- 2 Push the **DAYPART** key. The next display that appears is shown as:



```
04/26/05 06:30:54
> Enter 0 if done or
Daypart # (1-24): 0 <
```

- 3 Next enter the daypart number that you want changed. Follow the prompts including the begin time of the daypart. The areas that you can change are; timing events, target and excess times. If you want to change your target and excess limits for the whole day on any time event, each daypart will need to be individually changed.