

---

---


## CHANGING THE LOCKOUT CODE ON THE SYS20 TIMER

- 1 Push the **ENTER** key on the keypad. If you have a lockout code setup in the programming, enter the lockout code first. You will get a display on the LCD display that appears as shown:



```
04/26/05 06:30:54
> Enter command or ESC <
```

- 2 If your timer already has a lockout code and you forgot the number, call HME tech support at 1-800-848-4468, option 3 to get a temporary code to use to get to the above screen.
- 3 Push the **SETUP** key and the number 6. The next display on the LCD display that appears as shown:

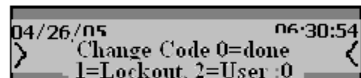

```
04/26/05 06:30:54
> Change Code 0=done
  1=Lockout, 2=User :0 <
```

- 4 Follow the prompts for the next two screens.