

ADD SYS30 MANAGER'S ACCESS CODE

1. Press the **SET UP SYSTEM** key. Screen Should show:

Set Up System Menus:
DRIVE-THRU MANAGER

Press + or - & ENTER

2. Press + or - until the following screen appears

Set Up System Menus:
SYSTEM SETUP

Press + or - & ENTER

3. Press **ENTER** key to get the following screen:

System Setup
STORE HOURS

Press + or - & ENTER


4. Press + or - until the following screen appears

System Setup
CHANGE ACCESS CODES

Press + or - & ENTER

5. Press **ENTER** key to get the following screen:

To Select Access
Code to Be Changed
REPORTS
Press + or - & ENTER

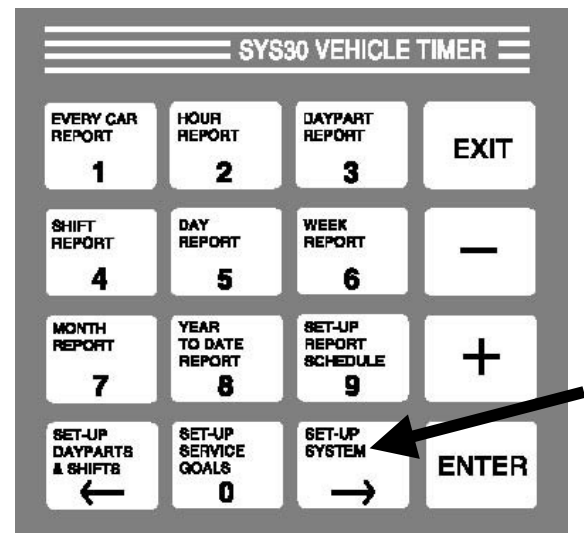

ADD SYS30 MANAGER'S ACCESS CODE CONTINUED

6. Press + or - until the following screen appears

```
To Select Access  
Code to Be Changed  
MANAGER  
Press + or - & ENTER
```

7. Press **ENTER** key to get the following screen:

```
Change MANAGER Code  
Enter New Code: _ _ _ _  
Retype New Code: _ _ _ _  
Press # Keys & ENTER
```

8. Enter 4 digit manager access code desired, then press **ENTER** key. Enter the same 4-digit managers code again. Now you should see:

```
Change MANAGER Code  
Enter New Code: * * * *  
Retype New Code: * * * *  
Press # Keys & ENTER
```

9. Press **ENTER** key. The Managers Code is now set. The screen should return to the main standby screen:

```
07:09:03P ▼ G ▼ N N N  
Service= 1:23  
Cars in Lane = 1  
Total Time = 3:47
```