

CHANGING THE DATE AND TIME ON THE SYS30 TIMER

1. Press the **SET-UP SYSTEM** key. If you have a lockout code setup in the programming, enter the lockout code and press **ENTER**.
2. Press + or - key until the following screen appears:

Set Up System Menus:
SYSTEM SETUP
Press + or - & ENTER

3. Press **ENTER** key, followed by the + or – keys to get the following screen:

System Setup
SET DATE/TIME
Press + or - & ENTER

4. Press **ENTER** key to get the following screen (the month will be flashing):

Date/Time
Date: APR 12,05
Time: 10:09A
Daylight Sav: NO

- a. Press + or - key until the correct month is displayed;
 - b. Press **ENTER** key to move to the Date field;
 - c. Press the number keys to enter the correct day of the month and year;
 - d. Press the number keys to enter the current time;
 - e. Press + or - key to select A (AM) or P (PM)
5. Press **EXIT** key three times to return to the main display.