



All-In-One Headset

1. **Channel A (Intercom 1) button** - Includes 2-wire and 4-wire connections
2. **ISO (Isolate) button** - To All Wireless Headsets and Belt Packs, Base, ISO Relay and AUX OUT (if activated)
3. **Increase Volume button (▲)**
4. **Decrease Volume button (▼)**
5. **Channel B (Intercom 2) button** - Includes 2-wire and 4-wire connections
6. **Power/Mode lights**
7. **Microphone**
8. **Power button (On/Off)**
9. **Battery**
10. **Battery-release latch**



Belt Pack

1. **Battery**
2. **Increase Volume button (▲)**
3. **Decrease Volume button (▼)**
4. **PWR (Power) button**
5. **Headset cable connector**
6. **Battery-release latch**
7. **Power/Mode lights**
8. **Channel A (Intercom 1) button** - Includes 2-wire and 4-wire connections
9. **ISO (Isolate) button** - To All Wireless Headsets and Belt Packs, Base, ISO Relay and AUX OUT (if activated)
10. **Channel B (Intercom 2) button** - Includes 2-wire and 4-wire connections

Settings & Adjustments

All-In-One Headset Lights Off:

- Make certain the headset power is Off.
 - Press and hold the **B button** while pressing and releasing the **Power button**.
- Note:** "Lights Off" is temporary. Lights return when power is cycled.

Belt Pack Sidetone Adjustment:

- Press and hold the **A button** while you repeatedly press up (▲) to increase or press down (▼) to decrease audio levels.

For technical support

In The Americas and Asia – Tel: +1.510.337.6600 or 1.800.462.4357 Menu option 1 • Hours: 8:00am-5:00pm Pacific Time • Email: SalesSupportUS@clearcom.com
In Europe, Middle East and Africa – Tel: +44.1223.815000 • Hours: 8:00am-5:00pm GMT • Email: SalesSupportEMEA@clearcom.com



Register Belt Pack or All-In-One Headset

- Make certain the Belt Pack or Headset is turned Off.
- Press **REG** button on base station.
 - STATUS display on the base station shows “o” for registration mode.
- On the Belt Pack and Headset, press and hold **ISO** while pressing **POWER** and then release all buttons.
 - The power lights blink red, then green and then turn off. One power light remains green.
 - The registration number will appear on the base station STATUS display.

AUTO NULL Adjustment (only if using 2-wire interface)

If echo is heard in wireless Belt Packs or All-In-One Headsets on A or B:

- Use pointed object (e.g. pen) to press and hold the A or B **AUTO NULL** button for 2 seconds.
 - CAUTION:** Before pressing an **AUTO NULL** button, be certain there are no open microphones on the wired system. Notify wired system users that a loud noise may occur in their headsets during the auto null adjustment. The system may be out of operation for approximately 50 seconds during this adjustment.

Local Headset Communication

- **SEL** button selects communication with **A**, **B** or **ISO**.
 - **A**, **B** or **ISO** lights indicate selection.
- **TALK** button
 - Press and release quickly to “latch on” for open communication.
 - Press and hold while talking for momentary communication – release when finished.
- **VOLUME** control adjusts the audio level in local headset ear piece.
- **MIC LEVEL** control adjusts the audio level going out from local headset microphone.