


ZOOM Nitro® Vision AI QUICK REFERENCE INSTALLATION GUIDE

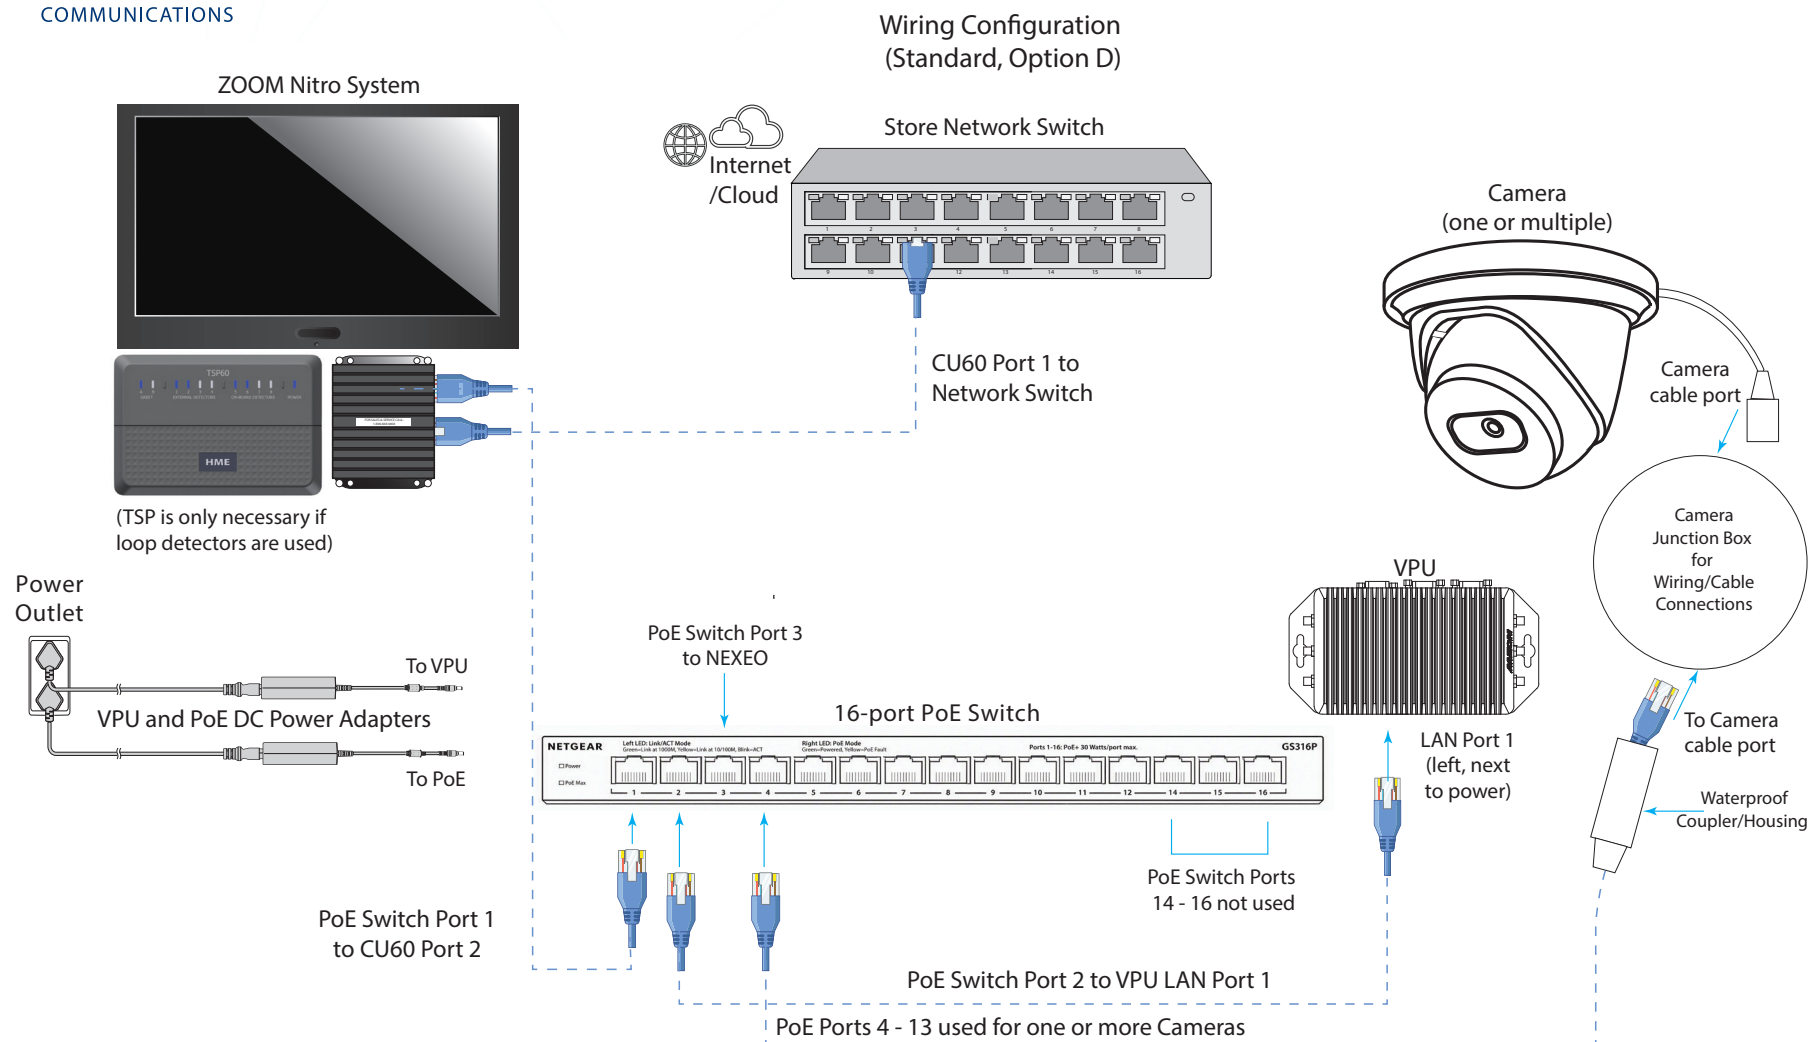


Note: Components are not drawn to scale and are only representations (may differ to actual components)

INSTALLATION INSTRUCTIONS

1. **Introduction>What's in the Box:** Check the sales order and packing slip against the contents you received to ensure you have everything needed. Contact HME if any parts are missing.
2. **Installation>Before You Begin:** Determine where the cameras will be placed and the routing path for cables above the ceiling tiles and for cables connecting components, such as the CU60, PoE switch, VPU, and network switch.
3. **Installation>Install All System Components & Connect All System Components:**
 - Install the ZOOM Nitro system first, connect, and power on. The Installation Wizard appears on screen and guides you.
 - Install and connect the cameras, PoE switch, and VPU.
 - Connect the PoE switch to the spare port on the CU60.
 - Power on all components.
4. **ZOOM Nitro Vision AI Setup And Configuration:**
 - Go to the NETWORK menu. Under LOCAL NETWORK>CONTROL UNIT NETWORK enable DHCP and NTP, the fields populate automatically.
 - Under HME NETWORK tab, verify the VPU is listed under HME Devices Test.
 - Go to the DETECTORS menu and enable Camera.
 - Refresh Cameras and verify the fields of view are acceptable, if not adjust camera until detection zones are in view.
 - Draw and configure zones. Save settings.
5. **Vision AI on the ZOOM Nitro Dashboard:** Camera configurations appear on the main dashboard. Lane Totals and parking orientation can be configured under the CAR DETECTION SETTINGS>LANE SETTINGS tab.
6. If also using loop detectors, configure them in CAR DETECTION SETTINGS, under the LANE DETECTORS tab.

Each step is detailed in the ZOOM Nitro Vision AI full installation guide posted online. Use the URL or QR code on this page to locate the guide.

EXAMPLE OF DRIVE-THRU AND PICK-UP ZONES USING CAMERAS

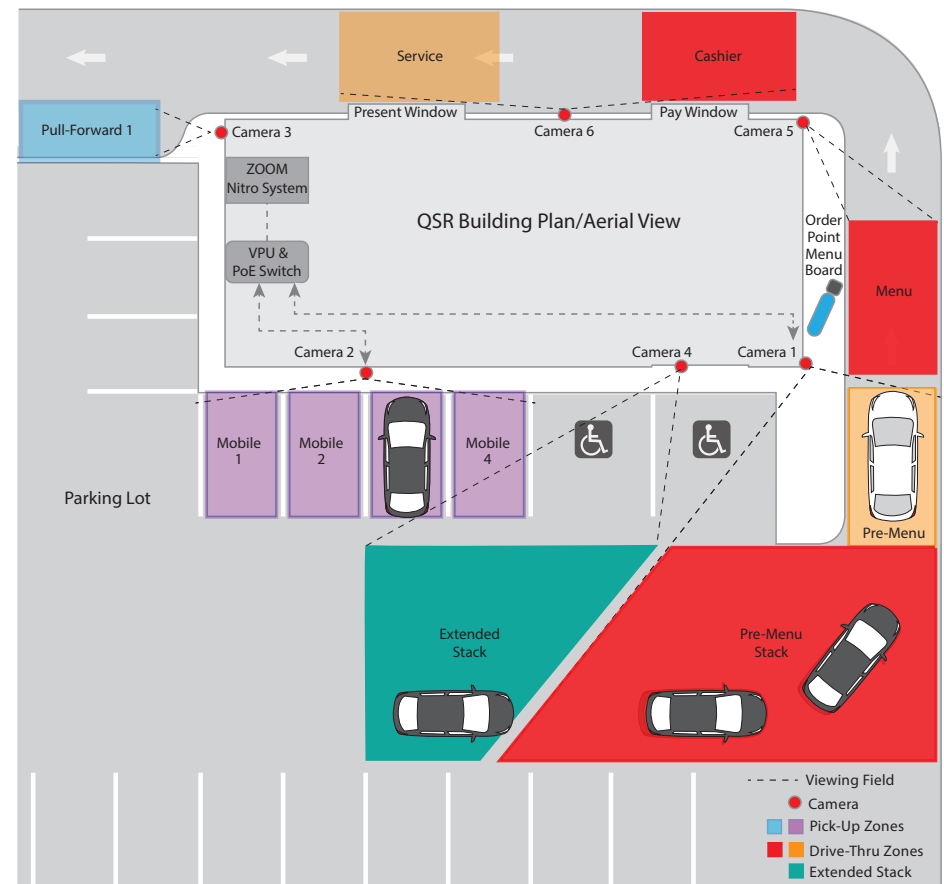

The full installation Guide for ZOOM Nitro Vision AI is located on the User Manuals page of the HME website under Drive-Thru Timer Systems > ZOOM Nitro. To access this page, scan this QR code or use this link:

<https://www.hme.com/qsr/drive-thru-user-manuals/>



© 2026 HM Electronics, Inc.

The HME logo and product names are registered trademarks or trademarks of HM Electronics, Inc. All rights reserved.

HM ELECTRONICS, INC.

2848 Whiptail Loop, Carlsbad, CA 92010 USA
Phone: 1-800-848-4468 Fax: 858-552-0172
Website: www.hme.com Email: support@hme.com