



Navigation


- EXIT will step back to the previous screen
- The + and – keys are used to change your selections like AM to PM and YES to NO
- ENTER confirms your selection
- The 0-9 keys are used to input numbers
- The ← and → arrow keys are used to move back and forward when you have to select different characters

Temporary Access Codes

In the event you need to enter a password to get access to the timer, please use these codes based on the current time of your system. Please note that they are only valid for **Sunday, March 8th 2020**:

1 AM/PM = 4844	7 AM/PM = 4842
2 AM/PM = 4847	8 AM/PM = 4845
3 AM/PM = 4843	9 AM/PM = 4848
4 AM/PM = 4846	10 AM/PM = 4841
5 AM/PM = 4849	11 AM/PM = 4844
6 AM/PM = 4840	12 AM/PM = 4847

1

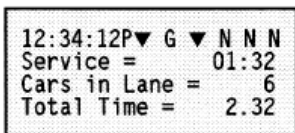


If you don't see this screen, push the EXIT button until it appears.

2



Push the SET UP SYSTEM button.

3

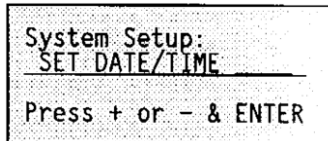


Push the + button until you see SET DATE/TIME flashing on the screen.

4



Push the ENTER button.

5

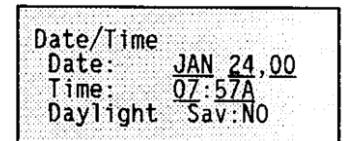

Verify the Date and Time are correct and that Daylight Sav is set to NO.

If you have any additional issues or wish to speak with one of our technical support representatives, please call us at 1-800-848-4468, and pick options 1, 2 and 3.