


Updating the ZOOM™ Timer to Seconds Only


The following instructions explain how to update your ZOOM Timer from Minutes & Seconds to Seconds Only.

How to Update the ZOOM Timer to Seconds Only

1. Click on the cogwheel in the top left corner.

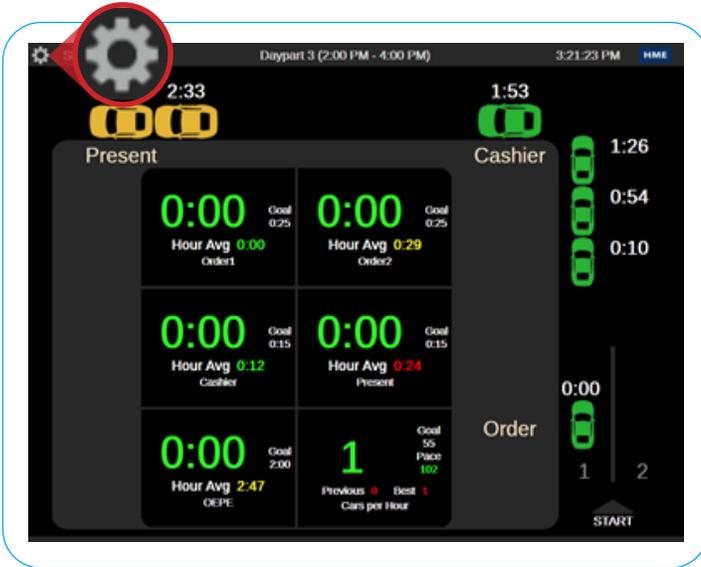


2. In the **Settings Menu**, click the **Settings** tab in the navigation bar at the top left. A dropdown menu will appear under the **Settings** tab.
3. Click on **Installer**. Then, click **System**.

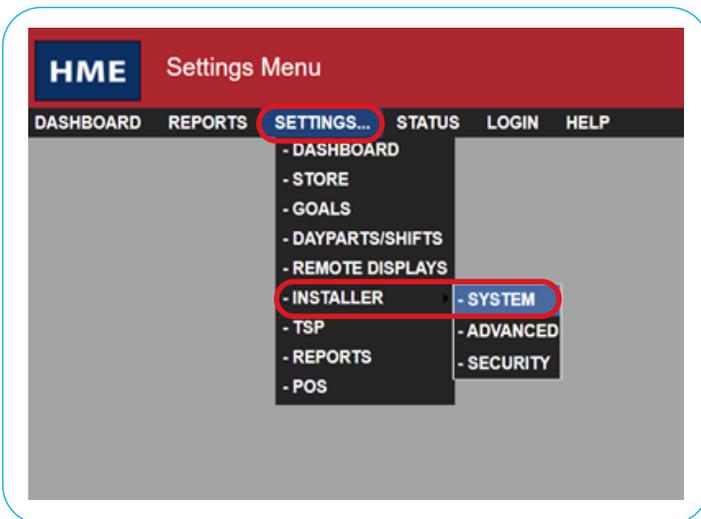


Updating the ZOOM™ Timer to Seconds Only

4. Log in as **Installer**.

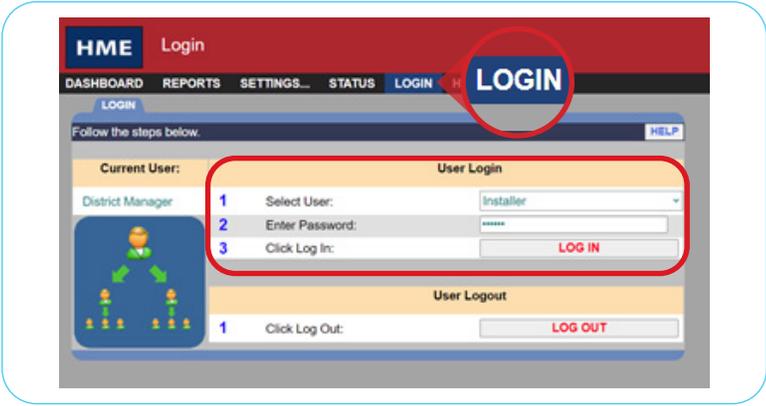

5. Click on the **Data Options** tab at the top right.


6. Click **Edit** to modify the data options settings.

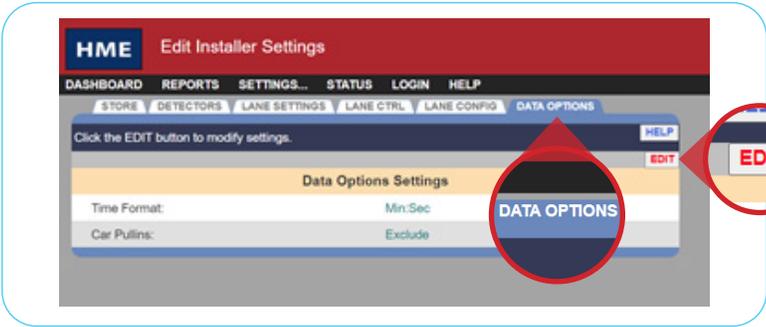

7. Click the **Time Format** dropdown option and select **Secs Only**.

8. Click on **Save**.

9. To return to the ZOOM Timer dashboard, click on **Dashboard** in the top navigation bar.

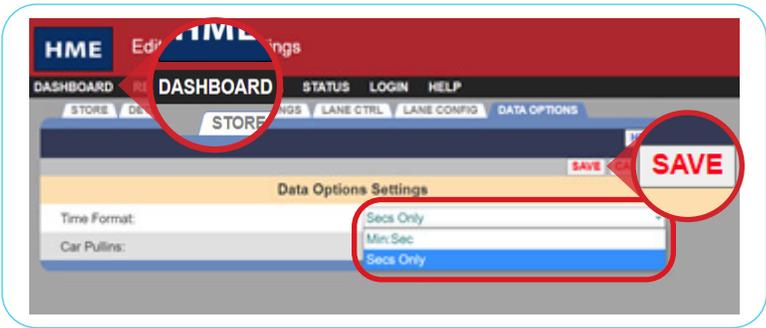

Updating the ZOOM™ Timer to Seconds Only

10. The ZOOM Timer dashboard will now be updated to display seconds only.



For help, call 800.848.4468 (options 1,2, and 3) or email: support@hme.com

