


CHANGING SYS30 SERVICE GOALS

Please follow the simple instructions below to change target goals on your HME System 30 timer. This procedure should only take 5 - 10 minutes.

From the main standby screen:

1. Press SET UP SERVICE GOALS key;
2. Press + or - key until MASTER SERVICE GOALS option is blinking;
3. Press ENTER key;
4. Press + or - key until MENU option is blinking;
5. Press # keys for B, C and D targets to match the goals shown in the chart below (or substitute your own);
6. When finished, press EXIT key;
7. Repeat steps 4-6 for GREET, SERVICE and TOTAL;
8. Press EXIT key twice to get back to main standby screen.

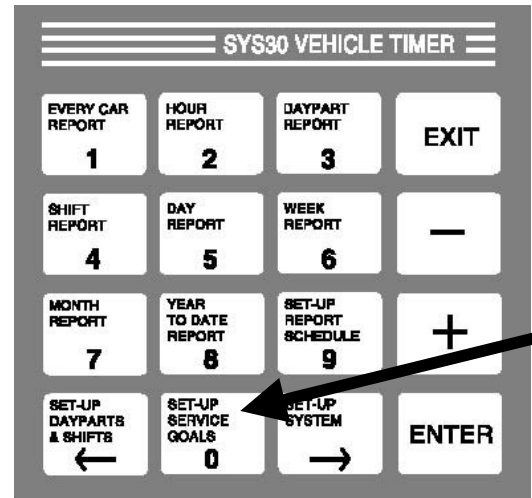

TARGET GOALS

| | <u>A</u> | <u>B</u> | <u>C</u> | <u>D</u> |
|---------|----------|----------|----------|----------|
| TOTAL | 2:30 | 4:00 | 4:00 | 4:00 |
| MENU | 0:45 | 1:30 | 1:30 | 1:30 |
| GREET | 0:05 | 0:05 | 0:05 | 0:05 |
| SERVICE | 1:00 | 2:00 | 2:00 | 2:00 |



After settings are reprogrammed, print out a settings report as follows:

1. Press SET UP SYSTEM key
2. Press + or - key until PRINT PROGRAMMING option is blinking
3. Press ENTER key
4. Press + or - key until SERVICE GOALS option is blinking
5. Press ENTER key
6. When START is flashing press ENTER key

Compare the desired settings to the target goals shown above (or to your substitutions) to be sure all settings are the same. If there is any discrepancy, please reprogram.