


toggling Between ZOOM Nitro® Dashboard and Leaderboard on a Single Monitor


1. Click the hamburger icon in the top left corner.

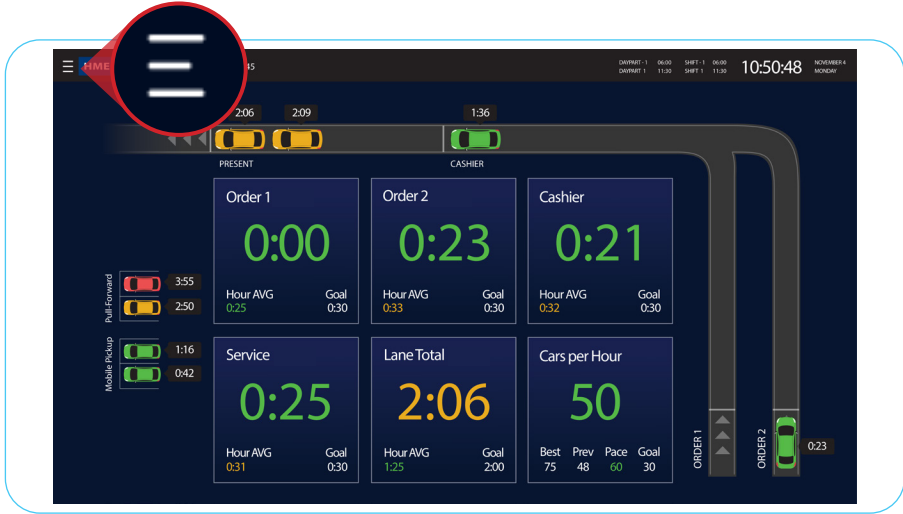


2. Click the desired User Type .

3. Enter the password, then click **Log In**.


NOTE: If you do not have a password set up for your user type, please contact HME Technical Support for assistance at 800-848-4468.

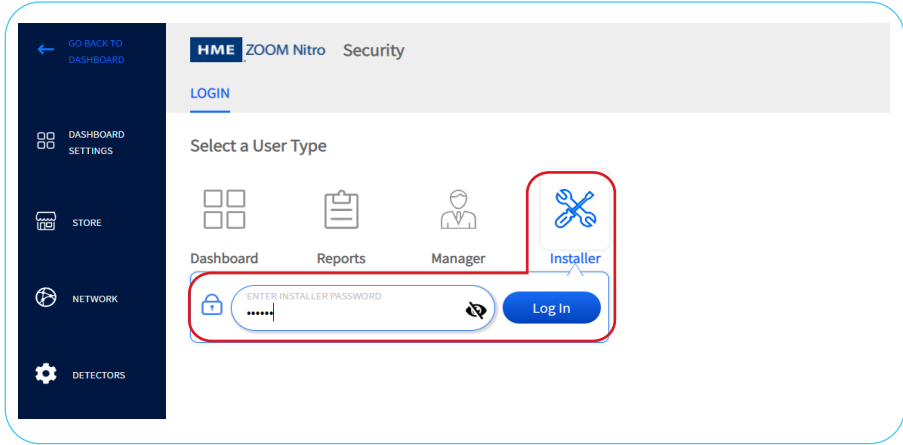


3. Under **LEADERBOARD DISPLAY**, click on the Toggle Switch to enable a *single monitor* to display the ZOOM Nitro Dashboard and Leaderboard. The toggle switch will change from gray to blue when activated.

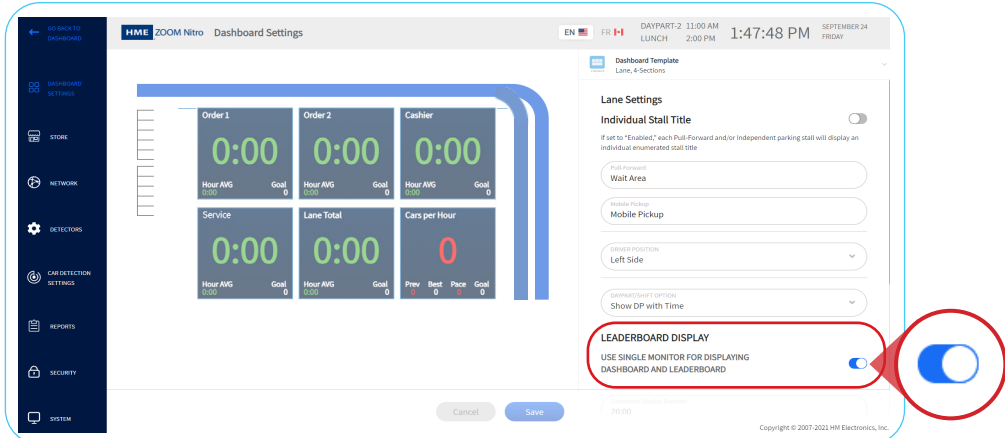


- Click on each of the three fields under **LEADERBOARD DISPLAY** to reveal a dropdown box.
- Click the arrows on the dropdown boxes to change the time interval of the Leaderboard display.

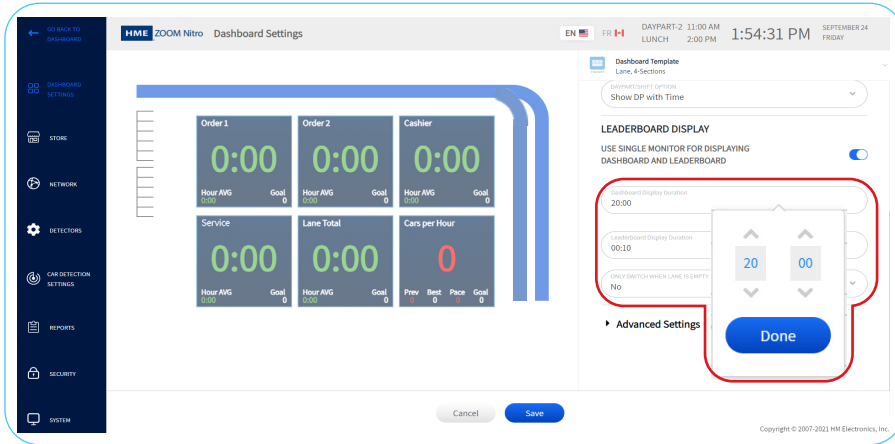

- Click **Save**.
- Click **GO BACK TO DASHBOARD**.

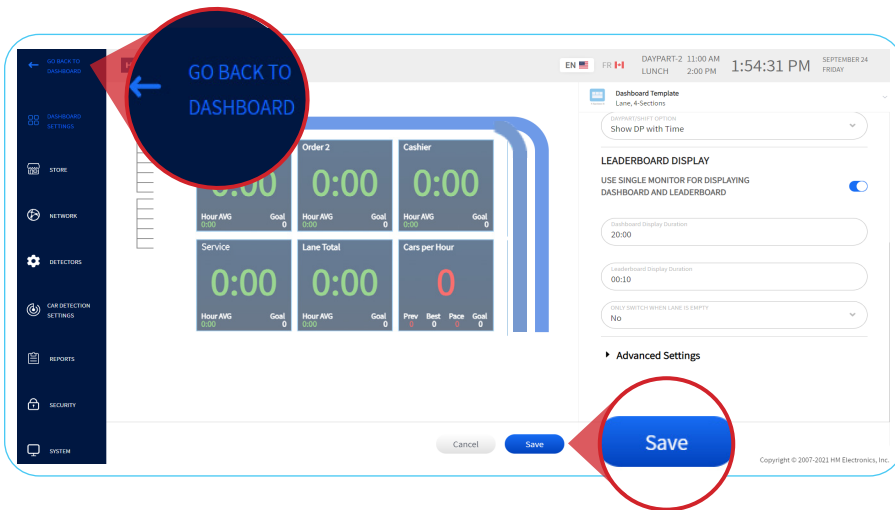

8. The ZOOM Nitro Dashboard will now toggle to the Leaderboard and back based on your preferred time settings.

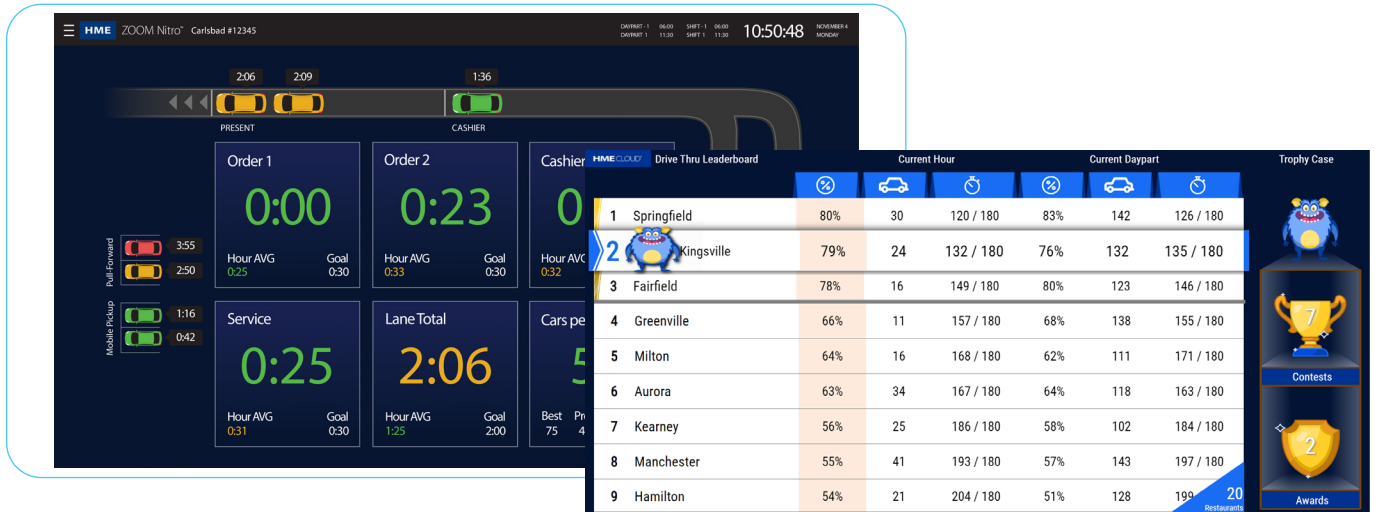

For help, call 800.848.4468 (options 1,2, and 3) or email: support@hme.com

