

DISABLE DISPLAY TONE FOR SYSTEM 30 TIMERS


Please follow the simple instructions below to delete alert tone settings on your HME System 30 Timer remote display. This procedure should only take 5 - 10 minutes.

From the main standby screen:

1. Press **SET UP SERVICE GOALS** key
2. Press + or - key until **REMOTE DISPLAYS** option is blinking
3. Press **ENTER** key
4. Press + or - key until **SETUP RMT DISPLAYS** option is blinking
5. Press **ENTER** key
6. Select Remote Number (1 - 16). If unsure which remote address is assigned, print settings report to view which display addresses are currently programmed (see instructions below). For assistance please contact our Technical Support group at 800-848-4468
7. Press **ENTER** key three times to get to the next screen
8. To disable the alert tone, press the + or – key in the **Tone at:** prompt until it reads **OFF**.
9. Press **ENTER** key
10. Ensure that the **Arrival = OFF** setting is not turned on
11. Screen should look similar to this:

Rem 09: Goal-Goal% p1
<u>TOTAL</u> Flash at: A
Tone at: OFF Beeps = 2
Rpt= 0 Arrival = OFF

12. Press **EXIT** key 4 times to get back to main standby screen

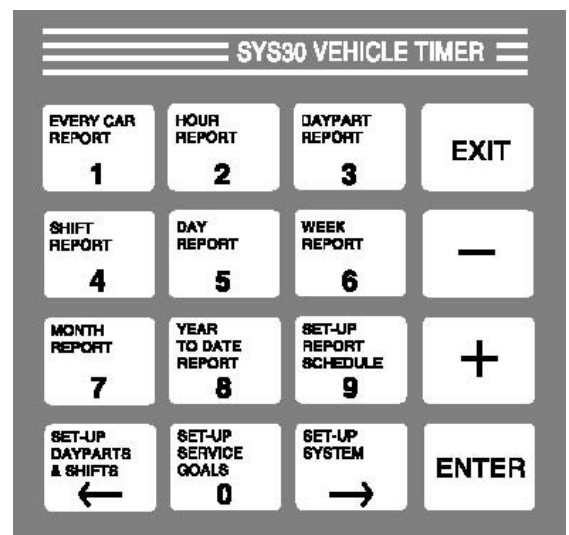

DISABLING DISPLAY TONE **FOR SYSTEM 30 TIMERS CONTINUED**

After settings are reprogrammed, print out a settings report as follows:

1. Press SET UP SYSTEM key
2. Press + or - key until PRINT PROGRAMMING option is blinking
3. Press ENTER key
4. Press + or - key until SERVICE GOALS option is blinking
5. Press ENTER key
6. When START is flashing press ENTER key

Check the desired settings to ensure all are correct. If there is any discrepancy, please reprogram.